


USB charger

USB charger connected to control box by using included Y-cable for handset.

Dimensions	Ø69.5* Ø 48*35.4
Weight	120g
Output current	Max. 2A
Output Voltage	5V
Input current	2A
Input Voltage	5V

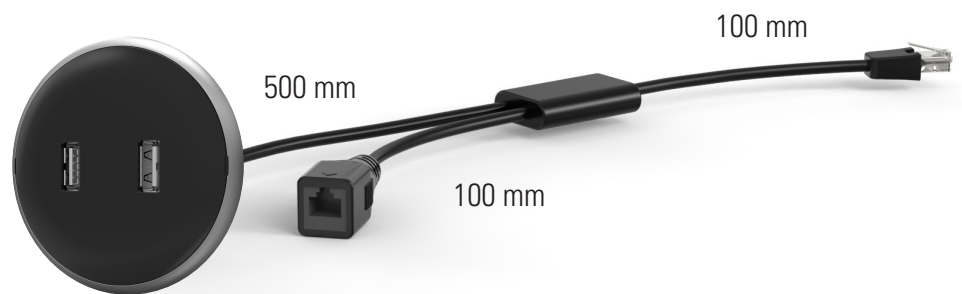

Reset

First time a desk is assembled and taken into use, the desk must be reset!

Press both ▲ ▼ buttons at the same time for 3 seconds.

Continue pressing the buttons until both columns are in lowest position.

Keep pressing the buttons until control box makes 1 beep.

When control box makes 1 beep, it is confirmed that reset has been completed and buttons can be released.

Now the desk is operational.

If the desk is disconnected by accidentally pulling out the plugs at the control box, motors, handset, main power source or system status reach overload, overheat etc. then the desk must be reset.

If the desk is powered off intentionally at the main power switch, then the desk does not need to be reset.

Drawing

Standard dimension (mm)

