



## Reset

First time a desk is assembled and taken into use, the desk must be reset!

Press  button down for 3 seconds.

Continue pressing the button until both columns are in lowest position.

Keep pressing the button until control box makes 1 beep.

When control box makes 1 beep, it is confirmed that reset has been completed and button can be released.

Now the desk is operational.

If the desk is disconnected by accidentally pulling out the plugs at the control box, motors, handset, main power source or system status reach overload, overheat etc. then the desk must be reset.

If the desk is powered off intentionally at the main power switch, then the desk does **not** need to be reset.

## Operating the desk

Press this  button up, to operate the desk for upwards running.

Press this  button down, to operate the desk for downwards running.

## Drawing

Standard dimension (mm)

