



## Reset

- Touch both ↙↘ and ↗↖ buttons simultaneously for 3 seconds. Continue touching the buttons until both columns are in lowest position while display shows "000". When finishing reset, the control box makes a beep and the buttons can be released.
- If releasing ↙↘ and ↗↖ buttons before the display shows "000", the desk goes back to normal operation. If releasing ↙↘ and ↗↖ buttons after the display shows "000", the user has to finish the reset to go back to normal operation.
- Reset is necessary at first operation of the desk.

## Tabletop – Change to new starting height



- The default starting height is 65cm.
- To adjust the starting height, press ↘↙ button to go to the lowest position of the desk. At the lowest position, press ↗↖ button again for 5 seconds, display starts flashing for 10 seconds.
- During the 10 seconds, press ↙↘ and ↗↖ buttons to adjust the starting height in centimeters. After 10 seconds, the display stops flashing and the preferred starting height is shown and has been stored.






## Normal operation

- TDH4 is connecting to control box. Press any button. 3-digits display shows current desk height in centimeters.
- Touch ↙↘ or ↗↖ area to adjust the desk height.
- When no buttons has been pressed in 30 seconds, display goes off. Press any button to light up the display again.
- When no button has been pressed for 30 seconds, the system goes to <0.1 W standby mode. Long press any button to wake the system up. Display shows desk height again.






## Programming of your highest / lowest position

**NB:** The setting of your highest / lowest position will be overruled during reset:  
During reset the desk will go to lowest position configured by factory.  
After reset the desk will remember your settings of highest/lowest position.





 
### Setting new highest position:

1. Press  and  buttons together for a sec.
2. Release  button – meaning you still press button 
3. Press  3 times
4. You will hear a “beep” - Done

 




### Setting new lowest position:

1. Press  and  buttons together for a sec.
2. Release  button – meaning you still press button 
3. Press  3 times
4. You will hear a “beep” - Done

### Cancel new highest position:

1. Go to the new highest height
2. Press  and  buttons together for a sec.
3. Release  button – meaning you still press button 
4. Press  3 times
5. You will hear a “beep” - Now you cancel the highest position

### Cancel new lowest position:

1. Go to the new lowest height
2. Press  and  buttons together for a sec.
3. Release  button – meaning you still press button 
4. Press  3 times
5. You will hear a “beep” - Now you cancel the lowest position