



## Reset

- Press both ⊕ and ⊖ buttons at the same time for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a beep and the buttons can be released.
- When conducting reset, the display shows "000" in last 100mm stroke. When finish reset, the display shows starting height again.
- If releasing ⊕ and ⊖ buttons before the display shows "000", the desk goes back to normal operation. If releasing ⊕ and ⊖ buttons after the display shows "000", the user has to finish the reset to go back to normal operation.
- Reset is necessary at first operation of the desk.

## Tabletop – Change to new starting height



- The default starting height is 65cm.
- To adjust the starting height, press ⊖ button to go to the lowest position of the desk. At the lowest position, press ⊖ button again for 5 seconds, display starts flashing for 10 seconds.
- During the 10 seconds, press ⊕ or ⊖ buttons to adjust the starting height in centimeters. After 10 seconds, the display stops flashing and the preferred starting height is shown and has been stored.

## Normal operation

- TDH9P is connecting to control box. Press any button. 3-digits display shows current desk height in centimeters.
- Press ⊕ or ⊖ button to adjust the desk height.
- When no button has been pressed for 10 seconds, display goes off. Press any button to light up the display again.
- When no button has been pressed for 30 seconds, the system goes to <0.1 W standby mode. Long press any button to wake the system up. Display shows desk height again.

## Memory position

- TDH9P supports 4 memory positions.
- 1. Operate the desk to preferred height.
- 2. Press any of ①②③④ together with ⊕ or ⊖ for 2 seconds to store the current height.  
Display shows P1/P2/P3/P4 when the position has been stored.
- 3. Now, hold any of the buttons ①②③④ until the desk reaches the stored height.
- Stored position can only be overwritten, not to be cleared.

## Programming of your highest / lowest position

**Note:** Only possible with control boxes TC15P/TC15S produced from April 2019, see label with serial number.

**NB:** The setting of your highest / lowest position will be overruled during reset: During reset the desk will go to lowest position configured by factory. After reset the desk will remember your settings of highest/lowest position.

### Setting new highest position:

1. Press ⊕ and ⊖ buttons together for a sec.
2. Release ⊖ button – meaning you still press button ⊕
3. Press ⊖ 3 times
4. You will hear a “beep” - Done

### Cancel new highest position:

1. Go to the new highest height
2. Press ⊕ and ⊖ buttons together for a sec.
3. Release ⊖ button – meaning you still press button ⊕
4. Press ⊖ 3 times
5. You will hear a “beep”, now you cancel the highest position

### Setting new lowest position:

1. Press ⊕ and ⊖ buttons together for a sec.
2. Release ⊕ button – meaning you still press button ⊖
3. Press ⊕ 3 times
4. You will hear a “beep” - Done

### Cancel new lowest position:

1. Go to the new lowest height
2. Press ⊕ and ⊖ buttons together for a sec.
3. Release ⊕ button – meaning you still press button ⊖
4. Press ⊕ 3 times
5. You will hear a “beep”, now you cancel the highest position

## Adjusting the sensitivity – SENSI TOUCH

**Note:** Only possible with Control boxes produced after 26 August 2019, see label with serialnumber.

Setting method by using handset with display and memory function:

1. Press 1 + 2 together for 5 seconds to enter setting mode - The display flashes
2. Press ▲ or ▼ to adjust the level of sensitivity  
0 = deactivating sensi touch · 9 = most sensitive

Level	0	1	2	3	4	5	6	7	8	9
Sensitivity	Deactivate Sensi touch	200	150	125	100	70 (Default)	50	30	20	10

3. Press 1 + 2 together or leave it for 5 seconds, it will go back to normal operation.

## Drawing

Standard dimension (mm)

