

Disposal guidance

ADJUSTME 1 - Easy may be disposed by dividing them into different waste groups for recycling or combustion. We recommend that ADJUSTME 1 - Easy is disassembled as much as possible before disposal. Main groups within sorting of waste: Metal, plastic, cable scrap, combustible material and collection for recoverable resources.

Some of these main groups can be sub-divided into groups e.g. metal can be divided into steel and aluminum or plastic can be divided into ABS and PP. All plastic parts > 50 g are provided with an internal code for plastic types.

As an example of sorting we show you below, which recycling groups the different components in ADJUSTME 1 - Easy should be placed into:

Frame parts	Components	Waste areas	Recycle
Steel	Frames, spindles, spindle tubes, gear motors, screws, bearings	Metal scrap	95%
Plastic	Sliders, inlays, plastic covers, nuts, plastic caps, rubber grips, cable clamps, washers, shoes, control box housings, handset housings	Plastic recycling or combustion	95%
Electronics	PCB boards	Electronic scrap	65%
Cables	Cables	Cable combustion	70%

Environment



Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.